

Economy Plus Retractor

Product Parts

- 1 - Base
- 2 - Banner Rail
- 3 - Shock Cord Pole
- 4 - Pin




***Do Not Pull Pin Until Directed**



Display Set-Up

Step 1

Remove both endcaps from the Banner Rail (2) and snap the Banner Rail (2) open. Fully insert the top edge of the Banner into the groove of the Banner Rail (2.) Close the Banner Rail (2) & replace the endcaps.

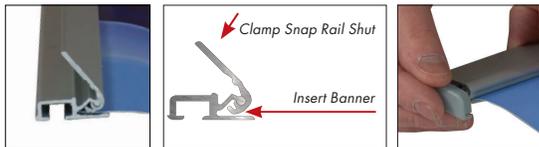

Step 3

Maintain tension on the banner while slowly removing the Pin (4). Allow the banner to gently roll into the canister.



****Store the Pin on the base for future graphic changes.**


Step 5

Insert the Shock Cord Pole (3) into the hole in the center of the base. Ensure the pole is seated completely into the bottom half circle cutout.



Step 7

To adjust the height of your retractor, open the telescoping clamp to raise and lower your banner height. *Do not exceed 79" high.* Close the telescoping clamp to secure your pole in place.

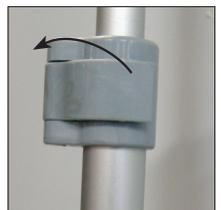


Flip open to adjust height



Close to secure

Step 2

(A) Lay the banner flat, printed side up and align the banner to the top of the tape leader. (B) On the Base (1) remove the strip of protective paper to expose the adhesive while firmly and evenly pressing the bottom of the banner onto the adhesive. (C) Gently smooth out any bubbles or wrinkles where the banner and tape leader connect.

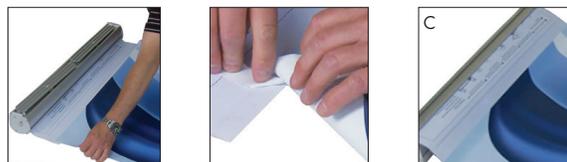

Step 4

Flip the Base (1) upside down and rotate the foot to sit perpendicular to the Base.



Step 6

While holding the Shock Cord Pole (3), gently lift the Banner Rail (2) up. Tilt the Base Unit (1) back and attach the Banner Rail (2) to the top of the Shock Cord Pole (3).




Storage & Care

Place all product parts into Carry Case and store in a cool dry location. To clean, wipe with damp cloth.

Replacement Graphic

What you will need before you start

- 1 - Graphic
- 2 - Two-Sided Banner Tape
- 3 - Tension Pin

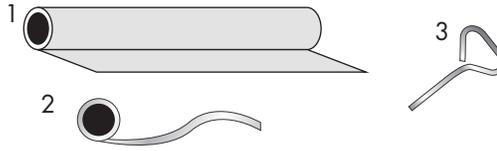

* For ease of graphic replacement, the use of a competent partner is recommended but not required.



Prep Instructions


Step 1

Locate the Tension pin on your retractor. It is usually found on the bottom of the base. A two inch finishing nail can substitute for the pin. Hold the base firmly and have your partner carefully pull the banner completely out of the base exposing the leader beyond the original graphic. This is best done laying the unit on its backside.



Step 2


With the leader exposed and tension on the banner, fully insert the tension pin into the hole on the side of the unit preventing the axle from retracting the banner back inside. This may take your partner moving the banner slightly in or out to line the pin in its slot. If done correctly there will not be any tension on the banner and you can begin the graphic change out procedure.

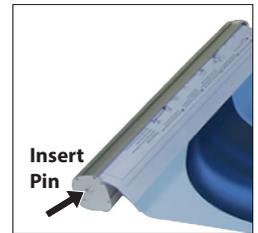

Graphic Replacement

Step 1

Carefully peel the graphic from the leader. You don't want to damage or tear the leader.

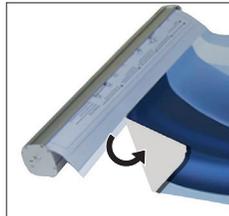


Step 2

Remove the plastic end caps from the ends of the snap rail. Snap the rail open. Note how the banner was installed in the rail so you can replicate that with the new graphic.



Step 3

Install the snap rail on the top of the banner. Make sure the banner is all the way inserted in the snap rail. Snap the rail shut and replace the end caps.

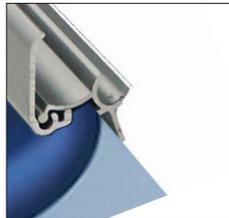


Step 4

Adhere the provided banner tape to the end of the leader. Remove backer from the tape and adhere the banner to the leader making sure it's completely straight. You can add a strip of packing tape for added precaution.



Step 5

Have your partner hold the top of the banner taut and then gently pull the tension pin out. Retract the new banner slowly into the base.

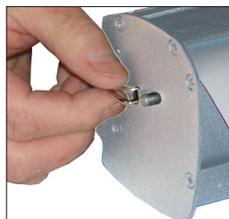

NOTE:

End Caps, Snap Rails, Tension Pins and other hardware may vary from your product, however the concept is the same.