

Economy Retractor

Scan to view Product Instructional Video or go to url:
www.creativeDisplaysite.com/EconoRetractor.html



Product Parts

- 1 - Base
- 2 - Banner Rail
- 3 - Shock Cord Pole
- 4 - Pin






***Do Not Pull Pin Until Directed**



Display Set-Up



Step 1

Remove both End Caps (A) from the Banner Rail (2) and snap it open. Fully insert the top edge of the Banner into the groove of the Banner Rail (2) and snap it shut (B).

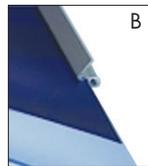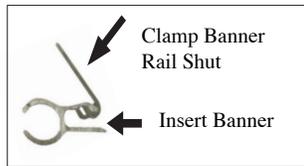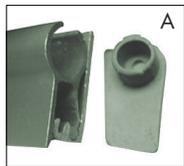

Step 2

(A) Lay the banner flat, printed side up and align the banner to the top of the tape leader. (B) On the Base (1) remove the strip of protective paper to expose the adhesive while firmly and evenly pressing the bottom of the banner onto the adhesive. (C) Gently smooth out any bubbles or wrinkles where the banner and tape leader connect.

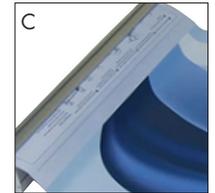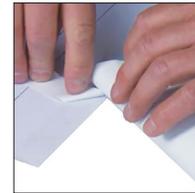

Step 3

Maintain tension on the banner while slowly removing the Pin (4). Allow the banner to gently roll into the canister.



****Store the Pin on the base for future graphic changes.**

Step 4

Flip the Base (1) upside down and rotate the feet to sit perpendicular to the Base.



Step 5

Insert the Shock Cord Pole (3) into the hole in the center of the base. Ensure the pole is seated completely into the bottom half circle cutout.



Step 6

Stand facing the back of the Base (1) and gently pull the Banner Rail (2) upwards. Clip the Hook into the opening at the top of the Pole.



Storage & Care

Place all product parts into Carry Case and store in a cool dry location.
To clean, wipe with damp cloth.

Warranty Information: All products are designed to provide the user with a cost-effective and durable product. Standard warranty is a 'one year parts and labor' warranty which warrants product against defects in material and workmanship. It does not cover damage due to accidents, abuse, or normal wear and tear. Products found to be defective will be replaced or repaired at factory's discretion.