
Scan to view Product Instructional Video or go to url: www.creativedisplaysite.com/Econo48.html



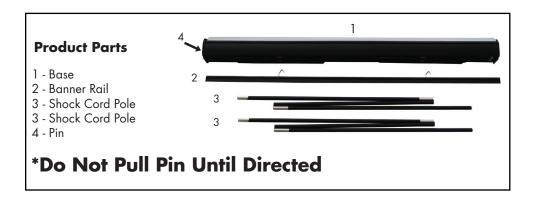



Banner Install

Step 1

Remove all parts from the bag. Place the banner on a clean, flat surface.



Step 2

Remove both End Caps (A) from the Banner Rail and snap the Banner Rail (3) open. Fully insert the top edge of the Banner into the groove of the Banner Rail 3) and snap it shut (B).

 


 




Step 3

Lay the banner flat, printed side up. On the Base (1) remove the strip of protective paper to expose the adhesive (A). Firmly and evenly press the bottom of the banner (B) onto the adhesive, and be sure to smooth out any bubbles or wrinkles (C).







Step 4

Maintain tension on the banner while slowly removing the Pin (4). Allow the banner to gently roll into the canister.







Step 5

Once the banner has been fully retracted into the Base, simply place the display in the carrying case until you are ready for display set-up.

Display Set-Up

Insert the Shock Cord Pole (2)

into the hole in the center of the

base. Ensure the pole is seated

completely into the bottom half

Step 1

Step 3

circle cutout.

 
Remove the display from the carrying case and place at your desired location



*** To ensure that the display does not twist, it is recommended that two people extend the banner from the base and hook the snap

Flip the Base (1) upside down and

rotate both feet to sit perpendicular



and ready for use.

 


 
Step 4

Step 2

to the Base.

rail to the poles.





Once set, your display is complete

Storage

Place all product parts into Carry Case and store in a cool dry location.



Care

To clean, wipe with damp cloth.