

Front View

Angle View

PRODUCT DESCRIPTION

This large banner frame is a great alternative to standard pop up backwall displays. The One Choice Slider frame can adjust to display a 8W' \times 7.5'H or 10'W \times 7.5'H graphic . Graphics are printed on dye sub stretch fabric with pole pockets sewn to the top and bottom for easy graphic installation.

FEATURES

DISPLAY DIMENSIONS • 96"W x 94"H x 17.25"D

GRAPHIC MATERIAL • Dye Sub Stretch Fabric

DISPLAY CONSTRUCTION • 25mm aluminum tube frame **GRAPHIC DIMENSIONS** • 96"W x 90"H

GRAPHIC FINISHING • 4.5" Pole pockets on top and bottom with hemmed sides

WEIGHT & DIMENSIONS (STAND & GRAPHICS)

SHIPPING WEIGHT20 lbs

PACKAGE DIMENSION • 46"W × 6"H × 6"D

TURNAROUND TIME

GRAPHIC PACKAGE

NDOOR

 2 business days after proof approval* AVAILABILITYWEST COASTFULFILLMENT CENTER

*After proof approval, for **up to 10 sets**. Reply with approval via e-mail by 4:00pm PT the day prior to the assigned ship date.







GLM SELECT [®] SLIDER 10FT X 7.5FT PRODUCT CODE: OC-SLD10X7.5G







PRODUCT DESCRIPTION

This large banner frame is a great alternative to standard pop up backwall displays. The One Choice Slider frame can adjust to display a 8W' \times 7.5'H or 10'W \times 7.5'H graphic . Graphics are printed on dye sub stretch fabric with pole pockets sewn to the top and bottom for easy graphic installation.

FEATURES

DISPLAY DIMENSIONS • 120"W x 94"H x 17.25"D

GRAPHIC MATERIAL • Dye Sub Stretch Fabric

DISPLAY CONSTRUCTION • 25mm aluminum tube frame **GRAPHIC DIMENSIONS** • 120"W x 90"H

GRAPHIC FINISHING • 4.5" Pole pockets on top and bottom with hemmed sides

WEIGHT & DIMENSIONS (STAND & GRAPHICS)

SHIPPING WEIGHT
• 20 lbs

PACKAGE DIMENSION • 46"W x 6"H x 6"D

TURNAROUND TIME

GRAPHIC PACKAGE

 2 business days after proof approval* AVAILABILITYWEST COASTFULFILLMENT CENTER

*After proof approval, for **up to 10 sets**. Reply with approval via e-mail by 4:00pm PT the day prior to the assigned ship date.










GLM SELECT ® SLIDER PRODUCT CODE: OC-SLD10X7.5G or OC-SLD8X7.5G





PARTS LIST

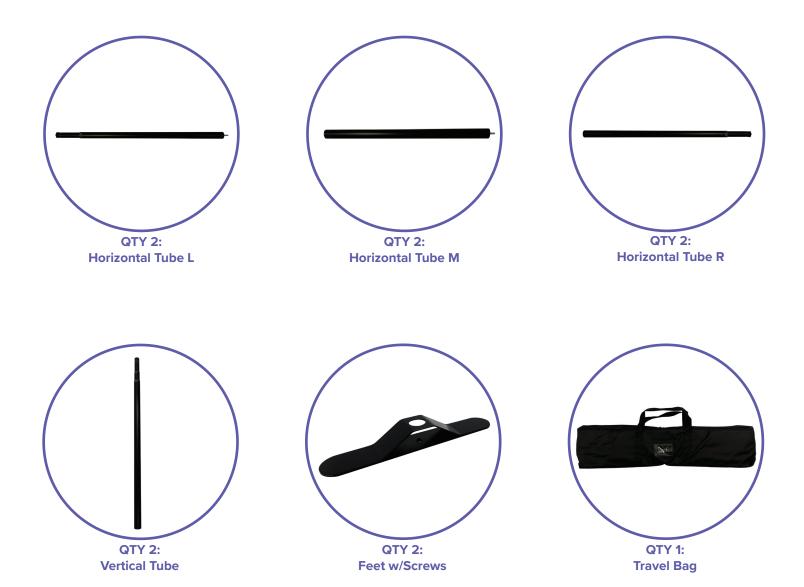




GLM SELECT ® SLIDER PRODUCT CODE: OC-SLD10X7.5G or OC-SLD8X7.5G



FRAME ASSEMBLY INSTRUCTIONS

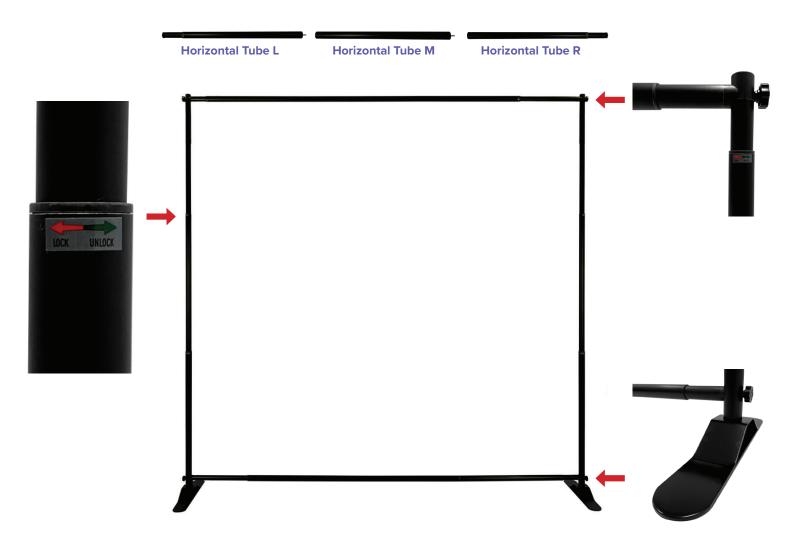

1. Assemble the top and bottom horizontal tubing (Horitzontal Tube L, Horizontal Tube M, & Horiztonal Tube R)

2. Attach feet to bottom of the vertical tubes with provided screws

3. Unfold your graphic and slide the horizontal tubes through the pole pockets at the top and bottom of the graphic. Tube length will need to be adjusted to fit the graphic width.

4. Attach top and bottom horizontal tubes to vertical tubes using the screw knobs at the ends of the horizontal tubing6. Once both top and bottom horizontal tubes and graphic are attached, hoist up vertical tubing until graphic is taught and

then twist the tubing to lock in place (see stickers on tubing for lock/unlock instructions)

7. Make any necessary adjustments to width and height



GLM SELECT [®] SLIDER PRODUCT CODE: OC-SLD10X7.5G



CARE SHEET - DYE-SUB FABRIC

HANDLING TIPS

- 1. Wrinkles can be removed with cool iron or fabric steamer.
- 2.Fabric should NOT be stored when damp or wet. Store in cool, dry area.
- 3. For storing graphics please remove from plastic packaging that was provided and keep fabric in cool/dry place.

WASHING

- 1. Your fabric graphic CANNOT be machine washed. Remove any hardware attached to the fabric prior to cleaning. Spot clean using MILD soap and cool water. Air dry fabric, dry on frame if frame is available.
- 2. Fabric must be COMPLETELY dry prior to storing.
- 3. Do NOT dry clean

STAIN TREATMENT

- 1. Treat stain on fabric.
- 2.Remove as much debris as possible with a soft bristle brush (do NOT rub too hard).
- 3. Use a clean, lint-free white cloth. Lightly pat the stain from the outside moving in (to keep stain from spreading).
- 4. If a cleaning solution is used, rinse the area well with water to ensure NO solution is left on fabric.
- 5. Most stains can be treated with household fabric stain removers. It is ALWAYS important to test how the solution will react to the fabric. This can be tested by dabbing solution to a small corner of the fabric. Most household cleaners will provide treatment instructions depending on the type of stain.



• Wrinkles can be removed from fabric with a cool iron or steamer.



• Do NOT machine washed.



Do NOT bleach fabric



• Do NOT tumble dry. Fabric must be air dried on the frame to prevent shrinking.